# TREX SECLUSIONS® DOUBLE GATE INSTALLATION GUIDE

## OPTIONAL ANTI-SAG CABLE KIT

**For large gate panels, it may be neccssary to use an anti-sag cable to eliminate the sag of a gate panel. Anti-sag cable kits can be purchased through your local Trex Distributor.**

A Black vinyl wrapped steel cable


B Cable clamp (2)

C 'S' hook

D 'D' rings (2)

E 1" Self-drilling screws (2)

F Turnbuckle

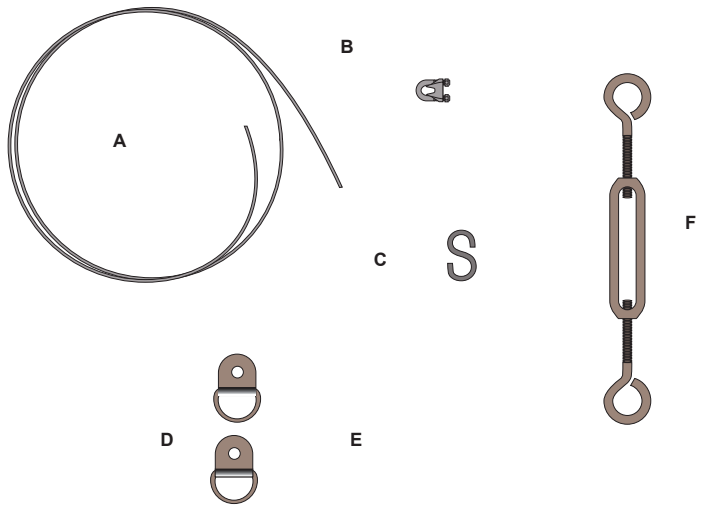


*Note: To make installation easier, prop the gate to the desired level using a block of wood under the latch side edge of the gate panel.*

A. **Attach upper 'D' ring to the "hinge side" of the panel, 5-1/2" down from top of gate and 1-3/4" from the edge of gate (to hit the inner steel frame), using (1) self-drilling screw.**

B. **Attach lower 'D' ring to the "latch side" of the panel, 2" up from bottom of gate and 1-3/4" from the edge of gate, using (1) self-drilling screw.**

C. **Lengthen the turnbuckle as long as possible before proceeding by twisting the center ring. Attach the turnbuckle to the upper "D" ring using the "S" hook.**

D. **Loop one end of the cable through the lower eye bolt of the turnbuckle. Attach a cable clamp and tighten nuts as tight as possible.**

E. **Loop the other end of the cable through the lower "D" ring and attach the other cable clamp. Pull the cable as tight as possible before tightening the nuts.**

F. **Remove any slack by tightening the turnbuckle, twisting the center ring of the turnbuckle.**

